


# boston *leather*

## Leather Fireman's Suspenders

Measurements are taken by laying out the suspenders and measuring one side. This is taken from the button hole on each end.

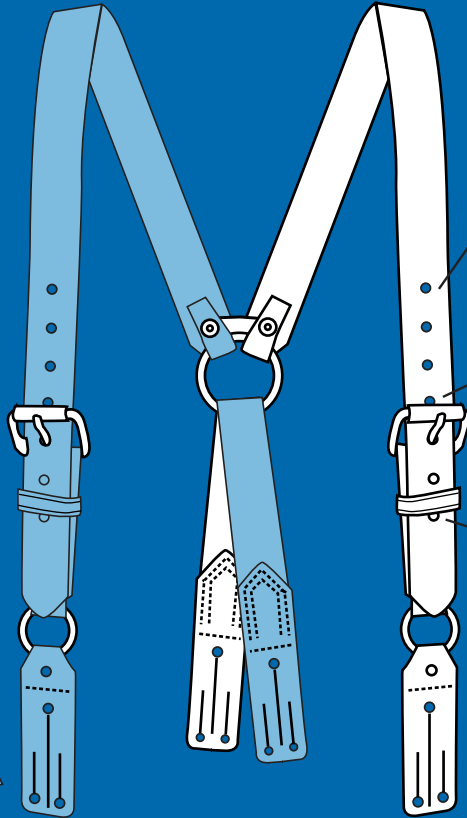

### Shortest

9175S-1 36.5"

9175-1 39.5"

9175XL-1 42.5"

### Middle Hole

9175S-1 38.5"

9175-1 41.5"

9175XL-1 44.5"

### Longest

9175S-1 42.5"

9175-1 45.5"

9175XL-1 48.5"

# boston *leather*

## 9178-1 High Back Suspenders

Measurements are taken by laying out the suspenders and measuring one side. This is taken from tip to tip.

